SIEMENS

ARCADIS Varic

SP

Installation Instructions

System

Unpacking the Basic Unit

© Siemens AG 2003
The reproduction, transmission or use of this document or its contents is not permitted without express written authority. Offenders will be liable for damages. All rights, including rights created by patent grant or registration of a utility model or design, are reserved.

Print No.: SPR2-310.812.01.04.02
Replaces: SPR2-310.812.01.03.02

English
Doc. Gen. Date: 11.04

Document revision level

The document corresponds to the version/revision level effective at the time of system delivery. Revisions to hardcopy documentation are not automatically distributed.

Please contact your local Siemens office to order current revision levels.

Disclaimer

The installation and service of equipment described herein is to be performed by qualified personnel who are employed by Siemens or one of its affiliates or who are otherwise authorized by Siemens or one of its affiliates to provide such services.

Assemblers and other persons who are not employed by or otherwise directly affiliated with or authorized by Siemens or one of its affiliates are directed to contact one of the local offices of Siemens or one of its affiliates before attempting installation or service procedures.

Table of Contents 3

1 _____ Unpacking the Basic Unit _____ 4

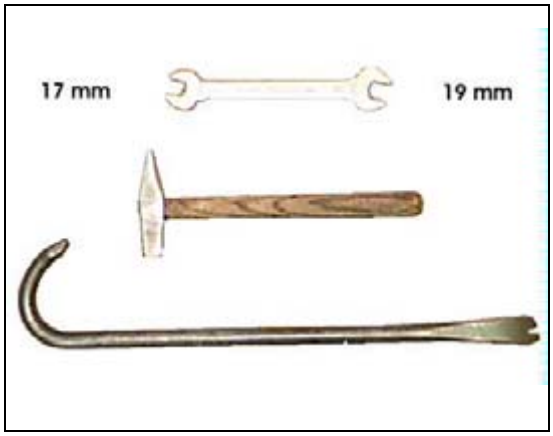

Fig. 1: Required tools. Not depicted: set of Allen wrenches

Fig. 2: Remove packing straps. Loosen ramp.

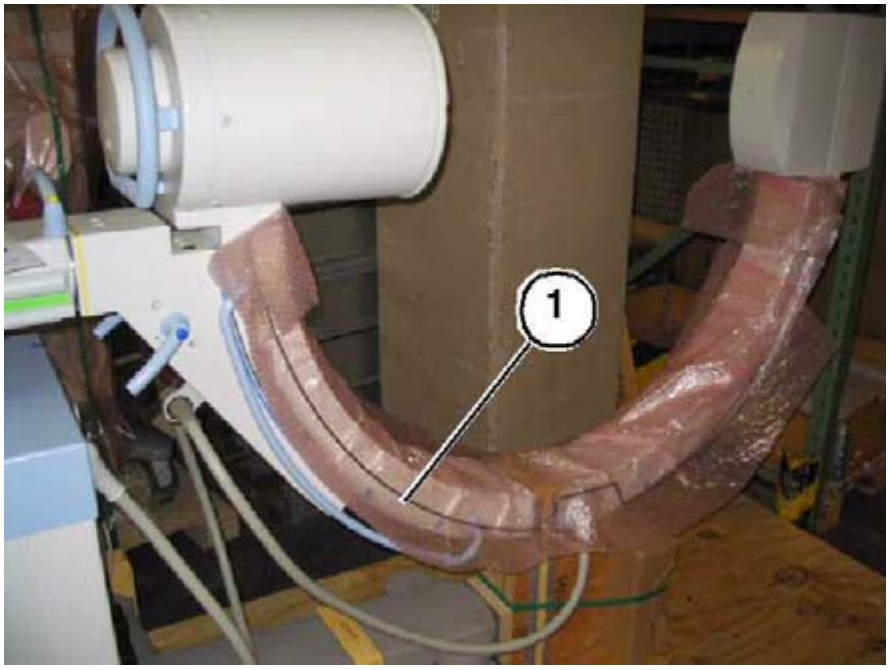

Fig. 3: _Clamp

Given the “metal clamp” option, remove this from the C-arm and give it to the customer.

Fig. 4: Attach ramp to pallet. Remove wood strip using pry bar.

Fig. 5: Remove both screws. Remove yellow brackets.

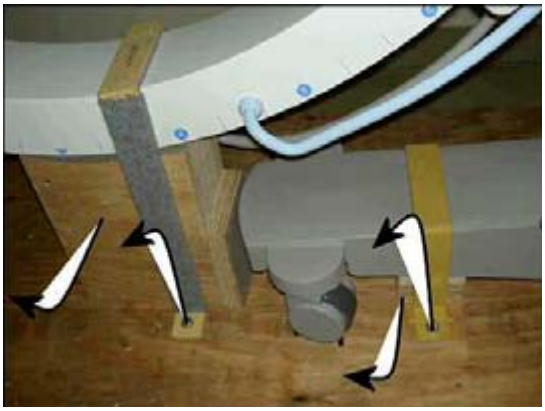

Fig. 6: Remove 4 screws. Remove yellow brackets. Remove support blocks.

Fig. 7: Lift and turn steering lever.

Fig. 8: Release foot brake; brake pedal is in the horizontal position.

Fig. 9: Move the unit off the pallet.